


UPPH-10000 Powerhead

Manual

10.00" Diameter

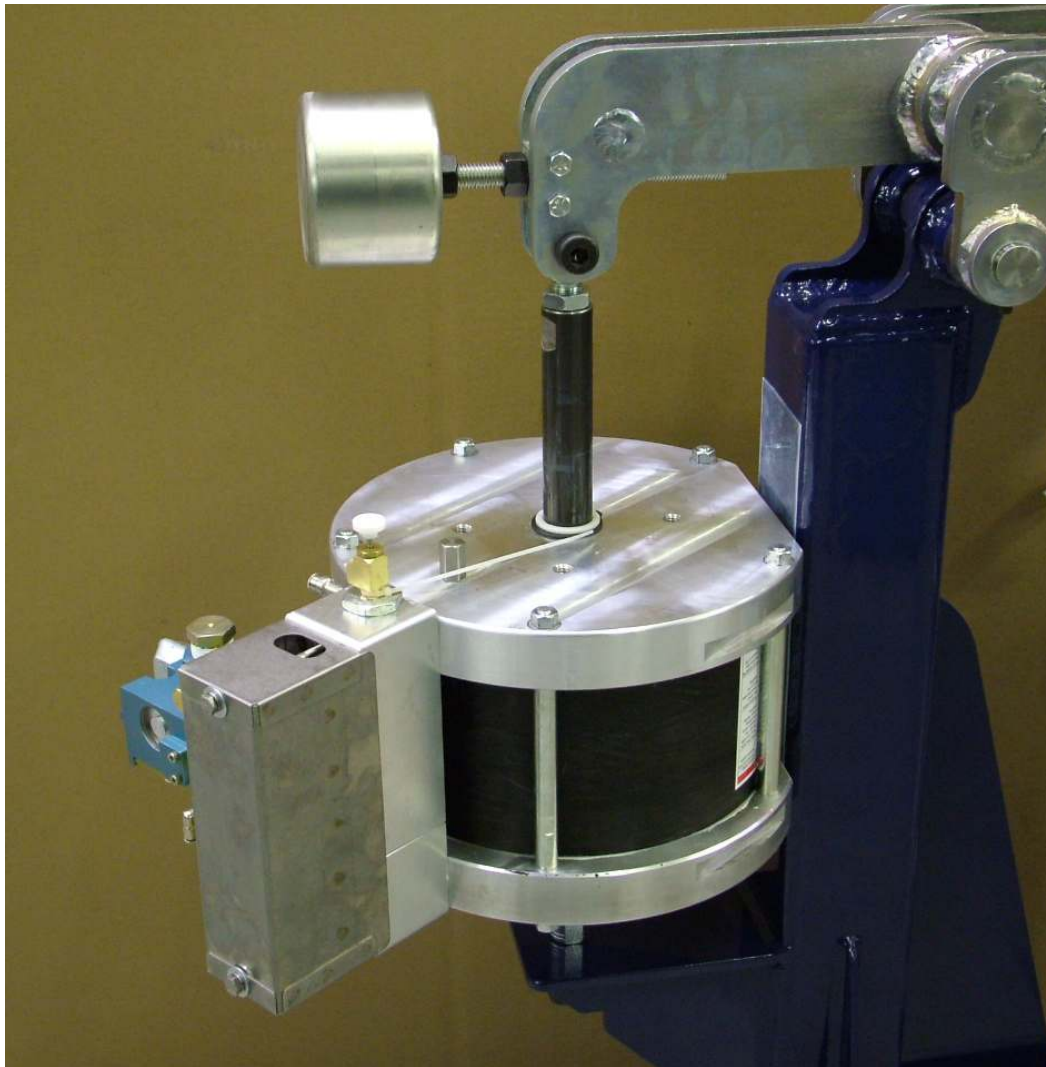

MagnumVenusPlastech

Rev. 05/2012



CORPORATE HEADQUARTERS and MANUFACTURING

11692 56th Court * Clearwater, FL 33760 * Tel 727-573-2955 * Fax 727-571-3636

TECHNOLOGY CENTER and MANUFACTURING

1862 Ives Ave. * Kent, WA 98032 * Tel 253-854-2660 * Fax 253-854-1666

MVP Plastech UK

Chilsworthy Beam, Gunnislake, Cornwall, PL18 9AT UK, * Tel: +44 (0) 1822 832621

Fax: +44 (0) 1822 833999

www.mvpind.com

TABLE OF CONTENTS:

SECTION:	Page
TERMS & CONDITIONS OF SALE	4
SAFETY & WARNING INFORMATION	6
INTRODUCTION	15
VALVE BLOCK DISASSEMBLY	16
VALVE BLOCK REASSEMBLY	18
AIR CYLINDER DISASSEMBLY	20
PILOT VALVE REBUILD	21
AIR CYLINDER REASSEMBLY	23
PARTS DRAWINGS	24
REVISION INFORMATION	32



Terms & Conditions of Sale:

- Customs duties, import and export licenses and certificates, if required, and all local taxes are excluded from this offer. If US state and local taxes are applicable and not included in equipment invoice, such amount may be invoiced later.
- Delivery dates or shipping schedules are approximate and based upon the most recent information available at the time of order. Dates may be adjusted upon receipt of subsequent information or modification of order. Seller will ship prior to the delivery date if possible, but not without Buyer's consent on Advanced Equipment sales.
- All contract dates and timelines begin upon receipt at MVP of customer purchase order, signed Terms and Conditions of Sale (if applicable), and down payment per quotation (if applicable).
- If shipments are delayed by the Buyer, or because the Buyer's account is in arrears, payments shall become due on the date when the Seller is prepared to make shipment. Products held by the Seller for the Buyer shall be at the risk and expense of the Buyer.
- Damages, defects or shortages must be communicated immediately to MVP. Discrepancy in pricing and/or quantities on invoices must be reported within 30 days of the invoice date. Claims made 30 days or more following the invoice date will not be honored.
- Permission to return items must be requested and granted in advance. No credit will be given if items are returned prior to requesting and receiving permission. All returns are subject to a restocking fee. The standard 15% charges may be increased or decreased depending on the reason for the return. Special ordered items may not be returned.
- Seller warrants that the mechanical operation of the goods as specified shall be free from faults in respect to materials and workmanship for a period of 12 months for parts from the date of invoice. For systems, 12 months from start-up or, if earlier, 18 months from the date of the Bills of Lading. The warranty does not cover general wear and tear or damage due to negligence or improper use. Seller's liability under the warranty shall be limited solely to repair or replacement costs, and has no responsibility for reimbursing repair cost incurred by Buyer in connection with equipment without first giving written authorization for such charges. Seller makes no express warranties except those set forth in this agreement, and disclaims all other warranties, expressed or implied, including without limitation, implied warranties of non-infringement merchantability and fitness for a particular purpose. Seller accepts no liability for loss of production, loss of profits, or other direct or indirect damages. In any claim by the Buyer



against the Seller in respect of the goods, the liability of the Seller shall be limited to the value of the goods.

- Many factors beyond Seller's control contribute to the success of Buyer's finished products, such as raw materials used to manufacture the product. Equipment is warranted to perform to specifications detailed in quotation, but Seller is not liable for quality or quantity of finished products produced by Buyer.
- The country of origin is the United States of America. Sale, installation and all rights of the parties are governed by the laws of the state of Florida. Venue with regard to any litigation shall be in Pinellas County, Florida. The parties agree to waive all rights to trial by jury as to any and all disputes.
- The goods remain the property of the Seller until full payment is received.
- Sale of equipment is subject to application and issuance of proper US Government export license and regulations, if applicable.
- Installation of equipment is responsibility of Buyer and Seller, with cost responsibility and number of days provided as detailed in original customer Quotation. Seller will provide installation supervision personnel within 30 days of customer request. If installation is delayed by the Buyer more than six months from the date of shipment, or if customer facility or material/parts are not prepared for installation, seller will invoice full installation costs, up to \$1,250 a day plus expenses, for each MVP installation technician on site. Seller has the option to waive this fee at its discretion.
- Parties shall be excused for delays caused by embargoes, acts of civil or military authorities, Acts of God, or other circumstances beyond the reasonable control of the parties. Notification of such delays must be made in writing within ten days of occurrence.
- Our agreement supersedes any previous agreement and applies in full.



SAFETY & WARNING INFORMATION:

OPERATING YOUR POLYESTER SYSTEM SAFELY



1. Introduction

Any tool, if used improperly, can be dangerous. Safety is ultimately the responsibility of those using the tool. In like manner, safe operation of polyester processes is the responsibility of those who use such processes and those who operate the equipment. This manual outlines procedures to be followed in conducting polyester operations safely. This system has been specifically designed for use of Polyester Resin, Gel-Coat, and Methyl Ethyl Ketone Peroxides (MEKP) applications. Other formulations or blends considered for use in this equipment is strictly prohibited without the expressed consent by Magnum Venus Plastech Inc. Magnum Venus Plastech cannot eliminate every danger nor foresee every circumstance that might cause an injury during equipment operation. Some risks, such as the high pressure liquid stream that exits the spray tip, are inherent to the nature of the machine operation and are necessary to the process in order to manufacture the end-product. For this reason, ALL personnel involved in polyester operations should read and understand the Safety Manual. It is very important for the safety of employees involved in the operation that equipment operators, maintenance and supervisory personnel understand the requirements for safe operation. Each user should examine his own operation, develop his own safety program and be assured that his equipment operators follow correct procedures. Magnum Venus Plastech hopes that this manual is helpful to the user and recommends that the precautions in this manual be included in any such program. Magnum Venus Plastech recommends this Safety Manual remain on your equipment at all times for your personnel safety. In addition to the manual, Magnum Venus Plastech recommends that the user consult the regulations established under the Occupational Safety & Health Act (OSHA), particularly the following sections:

1910.94 Pertaining to Ventilation.

1910.106 Pertaining to flammable liquids

1910.107 Pertaining to spray finishing operations, particularly Paragraph (m) Organic Peroxides and Dual Component Coatings.

Other standards and recognized authorities to consult are the National Fire Protection Association (NFPA) bulletins as follows:

NFPA No.33 Chapter 14, Organic Peroxides and Dual Component Materials

NFPA No.63 Dust Explosion Prevention

NFPA No.70 National Electrical Code

NFPA No.77 Static Electricity

NFPA No.91 Blower and Exhaust System

NFPA No.654 Plastics Industry Dust Hazards

Type of Fire Extinguishing equipment recommended: Fire Extinguisher – code ABC, rating number 4a60bc.

Extinguishing Media – Foam, Carbon Dioxide, Dry Chemical, Water Fog.

Copies of the above bulletins are available, at a nominal charge from:



National Fire Protection Association
470 Atlantic Avenue
Boston, MA 02210

Research Report No.11 of the American Insurance Association deal with “Fire, Explosion and Health Hazards of Organic Peroxides”. It is published by:

American Insurance Association
85 John Street
New York, NY 10038

Local codes and authorities also have standards to be followed in the operation of your spraying equipment. Your insurance carrier will be helpful in answering questions that arise in your development of safe procedures.

1.2 Personal Safety Equipment

Magnum Venus Plastech recommends the following Personal Safety Equipment for conducting safe operations of the Polyester Systems:

Magnum Venus Plastech recommends that the user consult the state and local regulations established for all Safety equipment listed.

2.0 Material Safety

2.1 Hazards Associated with Laminating Operations

The major hazards which should be guarded against in polyester laminating operations are those associated with:

1. The flammability and explosion dangers of the catalyst normally used – Methyl Ethyl Ketone Peroxide (MEKP).
2. The flammability dangers of clean-up solvents sometimes used (Magnum Venus Plastech recommends that clean-up solvents be non-flammable), and of resin diluents used, such as styrene.
3. The flammability dangers of catalyst diluents, if used. (Magnum Venus Plastech recommends that catalyst not be diluted.
4. The flammability dangers of the uncured liquid resins used.
5. The combustibility dangers of the cured laminate, accumulations of over spray, and laminate sandings.
6. The toxicity dangers of all the chemicals used in laminating operations with respect to ingestion, inhalation and skin and eye hazards.

2.2 Catalyst (Methyl Ethyl Ketone Peroxide)

MEKP is among the more hazardous materials found in commercial channels. The safe handling of the “unstable (reactive)” chemicals presents a definite challenge to the plastics industry. The highly reactive property which makes MEKP valuable to the plastics industry in producing the curing reaction of polyester resins also produces the hazards which require great care and caution in its storage, transportation, handling, processing and disposal. MEKP is a single chemical. Various polymeric forms may exist which are more or less hazardous with respect to each other. These differences may arise not only from different molecular structures (all are, nevertheless, called “MEKP”) and from possible trace impurities left from the manufacture of the chemicals, but may also arise by contamination of MEKP with other materials in its storage or use. Even a small amount of contamination with acetone, for instance, may produce an extremely shock-sensitive and explosive compound.


Contamination with promoters or materials containing promoters, such as laminate sandings, or with any readily oxidizing material, such as brass or iron, will cause exothermic “redox” reactions which can become explosive in nature. Heat applied to MEKP, or heat build-up from contamination reactions can cause it to reach what is called its Self-Accelerating Decomposition Temperature (SADT).



Researchers have reported measuring pressure rates-of-rise well in excess of 100,000 psi per second when certain MEKP's reach their SADT. (For comparison, the highest pressure rate-of-rise listed in NFPA Bulletin NO.68, “Explosion Venting”, is 12,000 psi per second for an explosion of 12% acetylene and air. The maximum value listed for a hydrogen explosion is 10,000 psi per second. Some forms of MEKP, if allowed to reach their SADT, will burst even an open topped container. This suggests that it is not possible to design a relief valve to vent this order of magnitude of pressure rate-of-rise. The user should be aware that any closed container, be it a pressure vessel, surge chamber, or pressure accumulator, could explode under certain conditions. There is no engineering substitute for care by the user in handling organic peroxide catalysts. If, at any time, the pressure relieve valve on top of the catalyst tank should vent, the area should be evacuated at once and the fire department called. The venting could be the first indication of a heat, and therefore, pressure build-up that could eventually lead to an explosion. Moreover, if a catalyst tank is sufficiently full when the pressure relief valve vents, some catalyst may spray out, which could cause eye injury. For this reason, and many others, anyone whose job puts them in an area where this vented spray might go, should always wear full eye protection even when laminating operations are not taking place.

Safety in handling MEKP depends to a great extent on employee education, proper safety instructions and safe use of the chemicals and equipment. Workers should be thoroughly informed of the hazards that may result from improper handling of MEKP, especially in regards to contamination, heat, friction and impact. They should be thoroughly instructed regarding the proper action to be taken in the storage, use and disposal of MEKP and other hazardous materials used in the laminating operation. In addition, users should make every effort to:

- A. Store MEKP in a cool, dry place in original containers away from direct sunlight and away from other chemicals.
- B. Keep MEKP away from heat sparks and open flames.
- C. Prevent contamination of MEKP with other materials, including polyester over spray and sandings, polymerization accelerators and promoters, brass, aluminum and non-stainless steels.

- D. Never add MEKP to anything that is hot, since explosive decomposition may result.
- E. Avoid contact with skin, eyes and clothing. Protective equipment should be worn at all times. During clean-up of spilled MEKP, personal safety equipment, gloves and eye protection must be worn. Firefighting equipment should be at hand and ready.
- F. Avoid spillage, which can heat up to the point of self-ignition.
- G. Repair any leaks discovered in the catalyst system immediately, and clean up the leaked catalyst at once in accordance with the catalyst manufacturer's instructions.
- H. Use only original equipment or equivalent parts from Magnum Venus Plastech in the catalyst system (i.e.: hoses, fitting, etc.) because a dangerous chemical reaction may result between substituted parts and MEKP.
- I. Catalyst accumulated from the purging of hoses or the measurement of fluid output delivered  should never be returned to the supply tank, such catalyst should be diluted with copious quantities of clean water and disposed of in accordance with the catalyst manufacturer's instructions.

The extent to which the user is successful in accomplishing these ends and any additional recommendations by the catalyst manufacturer determines largely the safety that will be present in his operation.

2.3 Clean-Up Solvents and Resin Diluents

WARNING

A hazardous situation may be present in your pressurized fluid system! Hydrocarbon Solvents can cause an explosion when used with aluminum or galvanized components in a closed (pressurized) fluid system (pump, heaters, filters, valves, spray guns, tanks, etc.). The explosion could cause serious injury, death and/or substantial property damage. Cleaning agents, coatings, paints, etc. may contain Halogenated Hydrocarbon Solvents. Some Magnum Venus Plastech spray equipment includes aluminum or galvanized components and will be affected by Halogenated Hydrocarbon Solvents.

- A. There are three key elements to the Halogenated Hydrocarbon (HHC) solvent hazard.
 - a. The presence of HHC solvents. 1,1,1 – Trichloroethane and Methylene Chloride are the most common of these solvents. However, other HHC solvents are suspect if used; either as part of paint or adhesives formulation, or for clean-up flushing.
 - b. Aluminum or Galvanized Parts. Most handling equipment contains these elements. In contact with these metals, HHC solvents could generate a corrosive reaction of a catalytic nature.
 - b. Equipment capable of withstanding pressure. When HHC solvent contact aluminum or galvanized parts inside a closed container such as a pump, spray gun, or fluid handling system, the chemical reaction can, over time, result in a build-up of heat and pressure, which can reach explosive proportions.

When all three elements are present, the result can be an extremely violent explosion. The reaction can be sustained with very little aluminum or galvanized metal; any amount of aluminum is too much.

A. The reaction is unpredictable. Prior use of an HHC solvent without incident (corrosion or explosion) does NOT mean that such use is safe. These solvents can be dangerous alone (as a clean-up or flushing agent) or when used as a component or a coating material. There is no known inhibitor that is effective under all circumstances. Furthermore, the mixing of HHC solvents with other materials or solvents, such as MEKP, alcohol, and toluene, may render the inhibitors ineffective.

B. The use of reclaimed solvents is particularly hazardous. Reclaimers may not add any inhibitors. Also, the possible presence of water in reclaimed solvents could feed the reaction.

C. Anodized or other oxide coatings cannot be relied upon to prevent the explosive reaction. Such coatings can be worn, cracked, scratched, or too thin to prevent contact. There is no known way to make oxide coatings or to employ aluminum alloys, which will safely prevent the chemical reaction under all circumstances.

D. Several solvent suppliers have recently begun promoting HHC solvents for use in coating systems. The increasing use of HHC solvents is increasing the risk. Because of their exemption from many State Implementation Plans as Volatile Organic Compounds

(VOC's), their low flammability hazard, and their not being classified as toxic or carcinogenic substances, HHC solvents are very desirable in many respects.



WARNING: Do not use Halogenated Hydrocarbon solvents in pressurized fluid systems having aluminum or galvanized wetted parts.

NOTE: Magnum Venus Plastech is aware of NO stabilizers available to prevent Halogenated Hydrocarbon solvents from reaction under all conditions with aluminum components in closed fluid system. TAKE IMMEDIATE ACTION... Halogenated Hydrocarbon solvents are dangerous when used with aluminum components in a closed fluid system.

A. Consult your material supplier to determine whether your solvent or coating contains Halogenated Hydrocarbon Solvents.

B. Magnum Venus Plastech recommends that you contact your solvent supplier regarding the best non-flammable clean-up solvent with the heat toxicity for your application.

C. If, however, you find it necessary to use flammable solvents, they must be kept in approved, electrically grounded containers.

D. Bulk solvent should be stored in a well-ventilated, separate building, 50 feet away from your main plant.

E. You should allow only enough solvent for one day's use in your laminating area.

F. "NO SMOKING" signs must be posted and observed in all areas of storage or where solvents and other flammable materials are used.

G. Adequate ventilation (as covered in OSHA Section 1910.94 and NFPA No.91) is important wherever solvents are stored or used, to minimize, confine and exhaust the solvent vapors.

H. Solvents should be handled in accordance with OSHA Section 1910.106 and 1910.107.

2.4 Catalyst Diluents

Magnum Venus Plastech spray-up and gel-coat systems currently produced are designed so that catalyst diluents are not required. Magnum Venus Plastech, therefore, recommends that diluents not be used. This avoids the possible contamination which could lead to an explosion due to the handling and mixing of MEKP and diluents. In addition, it eliminates any problems from the diluent being contaminated through rust particles in drums, poor quality control on the part of the diluents suppliers, or any other reason. If, however, diluents are absolutely required, contact your catalyst supplier and follow his instructions explicitly. Preferable, the supplier should premix the catalyst to prevent possible “on the job” contamination while mixing.

WARNING

If diluents are not used, it should be remembered that catalyst spillage, gun, hose and packing leaks are potentially more hazardous, since each drop contains a higher concentration of catalyst, and therefore will react quicker with over spray and the leak.

2.5 Cured Laminate, Overspray and Laminate Sandings Accumulation

A. Remove all accumulations of overspray, FRP sandings, etc. from the building as they occur. If this waste is allowed to build up, spillage of catalyst is more likely to start a fire; in addition, the fire would burn hotter and longer.

B. Floor coverings, if used, should be non-combustible.

C. Spilled or leaked catalyst may cause a fire if it comes in contact with an FRP product, oversprayed chop or resin, FRP sandings or any other material with MEKP.

To prevent this spillage and leakage, you should:

1. Maintain your Magnum Venus Plastech System. Check the gun several times daily for catalyst and resin packing or valve leaks. **REPAIR ALL LEAKS IMMEDIATELY.**
2. Never leave the gun hanging over, or lying inside the mold. A catalyst leak in this situation would certainly damage the part, possibly the mold, and may cause a fire.
3. Inspect resin and catalyst hoses daily for wear or stress at the entry and exits of the boom sections and at the hose and fittings. Replace if wear or weakness is evident or suspected.
4. Arrange the hoses and fiberglass roving guides so that the fiberglass strands **DO NOT** rub against any of the hoses at any point. If allowed to rub, the hose will be cut through, causing a hazardous leakage of material which could increase the danger of fire. Also, the material may spew onto personnel in the area.

2.7 Toxicity of Chemicals

A. Magnum Venus Plastech recommends that you consult OSHA Sections 1910.94, 1910.106, 1910.107 and NFPA No.33, Chapter 14, and NFPA No.91.

B. Contact your chemical supplier(s) and determine the toxicity of the various chemicals used as well as the best methods to prevent injury, irritation and danger to personnel.

C. Also determine the best methods of first aid treatment for each chemical used in your plant.

2.8 Treatment of Chemical Injuries

Great care should be used in handling the chemicals (resins, catalyst and solvents) used in polyester systems. Such chemicals should be treated as if they hurt your skin and eyes and as if they are poison to your body. For this reason, Magnum Venus Plastech recommends the use of protective clothing and eye wear in using polyester systems. However, users should be prepared in the event of such an injury. Precautions include:

1. Know precisely what chemicals you are using and obtain information from your chemical supplier on what to do in the event the chemical gets onto your skin or into the eyes, or is swallowed.
2. Keep this information together and easily available so that it may be used by those administering first aid or treating the injured person.
3. Be sure the information from your chemical supplier includes instructions on how to treat any toxic effects the chemicals have.

WARNING



Contact your doctor immediately in the event of any injury and give him the information you have collected. If your information includes first aid instructions, administer first aid immediately while you are contacting your doctor.

Fast treatment of the outer skin and eyes that contact such chemicals generally includes immediate and thorough washing of the exposed skin and immediate and continuous flushing of the eyes with lots of clean water for at least 15 minutes or more. These general instructions of first aid treatment, however, may be incorrect for some chemicals; that is why you must know the chemicals and treatment before an accident occurs. Treatment for swallowing a chemical frequently depends upon the nature of the chemical.

NOTE: Refer to your System User Manual for complete and detailed operating instructions and service information.

3.0 Equipment Safety

WARNING

Magnum Venus Plastech suggests that personal safety equipment such as EYE GOGGLES, GLOVES, EAR PROTECTION, and RESPIRATORS be worn when servicing or operating this equipment. Ear protection should be worn when operating a fiberglass chopper to protect against hearing loss since noise levels can be as high as 116 dB (decibels). This equipment should only be operated or serviced by technically trained personnel!

WARNING

Never place fingers, hands, or any body part near or directly in front of the spray gun fluid tip. The force of the liquid as it exits the spray tip can cause serious injury by shooting liquid through the skin. NEVER LOOK DIRECTLY INTO THE GUN SPRAY TIP OR POINT THE GUN AT OR NEAR ANOTHER PERSON. (TREAT THE GUN AS IF IT WERE A LOADED PISTOL.)

3.1 Emergency Stop Procedures

The following steps should be followed in order to stop the machinery in an emergency situation

1. The ball valve located where the air enters the power head of the resin pump, should be moved to the "OFF" or closed position. To do this, simply rotate the lever on the ball valve 90 degrees. Doing this will cause all the system air to bleed out of the system in a matter of a few seconds, making the system incapable of operating

NOTE: *Step 2 is a precautionary step and should be followed whenever the above mentioned ball valve is activated to the stop mode. Failure to do so, can damage the regulators and components on reactivating to the "ON" position.*

2. Turn all system regulators to the "OFF" position (counter-clockwise) position

NOTE: *Verify that the Catalyst relief line, located on the catalyst manifold, and the resin return line, located on the resin filter, are secured relieving catalyst and resin fluid pressure.*

3. Catalyst pressure in the catalyst pump can be eliminated by rotating the ball valve on the catalyst manifold 90 degrees to the "open" or "on" position.

Note: *The "open" or "on" position is when the ball valve handle is parallel (in line) with the ball valve body. The "closed" or "off" position is when the ball valve handle is perpendicular (across) the ball valve body.*



4. Resin pressure in the resin pump can be eliminated by rotating the ball valve on the resin filter 90 degrees to the "open" or "on" position. Place a container under the ball valve to catch any resin that is ejected out of the valve.

3.2 Grounding

Grounding an object means providing an adequate path for the flow of the electrical charge from the object to the ground. An adequate path is one that permits a charge to flow from the object fast enough that it will not accumulate to the extent that a spark can be formed. It is not possible to define exactly what will be an adequate path under all conditions since it depends on many variables. In any event, the grounding means should have the lowest possible electrical resistance. Grounding straps should be installed on all loose conductive objects in the spraying area. This includes material containers and equipment. Magnum Venus Plastech recommends grounding straps be made of AWG No.18 stranded wire as a minimum and the larger wire be used where possible. NFPA Bulletin No77 states that the electrical resistance of such a leakage path may be as low as 1 meg ohm (10 ohms) but that resistance as high as 10,000 meg ohms will produce an adequate leakage path in some cases. Whenever flammable or combustible liquids are transferred from one container to another, or from one container to the equipment, both containers or container and equipment shall be effectively bonded and grounded to dissipate static electricity. For further information, see **National Fire Protection Association** (NFPA) 77, titled "Recommended Practice on Static Electrical". Refer especially to section 7-7 titled "Spray Application of Flammable and Combustible Materials". Check with local codes and authorities for other specific standards that might apply to your application. NEVER USE HARD MATERIALS SUCH AS WIRE, PINS, ETC., TO CLEAR A PLUGGED GUN. HARD MATERIALS CAN CAUSE PERMANENT DAMAGE. DAB WITH A BRISTLE BRUSH, BLOW BACKWARDS WITH AIR UNTIL CLEAR WHILE WEARING A PROTECTIVE EYE SHIELD. REPEAT AS MANY TIMES AS NECESSARY. DO NOT PERFORM ANY MAINTENANCE OR REPAIRS UNTIL YOU HAVE FOLLOWED THE PRECAUTIONS STATED ABOVE. IF YOU, AS AN EQUIPMENT OPERATOR OR SUPERVISOR, DO NOT FEEL THAT YOU HAVE BEEN ADEQUATELY TRAINED OR INSTRUCTED AND THAT YOU LACK THE TECHNICAL KNOWLEDGE TO OPERATE OR PERFORM MAINTENANCE ON A PIECE OF MAGNUM VENUS PLASTECH EQUIPMENT, PLEASE CALL MAGNUM VENUS PLASTECH BEFORE OPERATING OR PERFORMING MAINTENANCE ON THE EQUIPMENT. IF YOU HAVE ANY QUESTIONS REGARDING THE ABOVE PRECAUTIONS OR ANY SERVICE OR OPERATION PRECEDURES, CALL YOUR MAGNUM VENUS PLASTECH DISTRIBUTOR OR MAGNUM VENUS PLASTECH.

NOTICE: All statements, information and data given herein are believed to be accurate and reliable but are presented without guaranty, warranty or responsibility of any kind express or implied. The user should not assume that all safety measures are indicated or that other measures are not required.

DANGER: Contaminated catalyst may cause Fire or Explosion. Before working on the catalyst pump or catalyst accumulator, wash hands and tools thoroughly. Be sure work area is free of dirt, grease or resin. Clean catalyst system components with clean water only.

DANGER: Eye, skin and respiration hazard. The Catalyst, MEKP, may cause blindness, skin irritation or breathing difficulty. Keep hands away from face. Keep food and drink away from work area.

WARNING: Please refer to your catalyst manufacturer's safety information regarding the safe handling and storage of catalyst. Wear appropriate safety equipment as recommended.



Introduction:

This manual covers the Ultra Proportioner version of the 10" diameter by 4" stroke length air motors.

The reassembly will require the use of removable Loctite® or equivalent thread lock compound, Lithium grease (Lubriplate 08465) and SUPERLUBE o-ring lubricant.

NOTE: Before starting any service work, release fluid and air pressure from system. Remove the two air lines and valves attached to the Powerhead valve block. The Powerhead assembly should be removed from the system for service work and mounted in a vise by the Clevis.

Please read the manual carefully. Follow the steps in the order given, otherwise you may damage the equipment or injure yourself.

During Disassembly . . .

As you disassemble the equipment, lay out the components in the correct order and direction, and have all component drawings available to refer to prior to disassembly. This will help you to reassemble them.





Valve Block Disassembly:

1. Remove the two Hex head screws (F-HB-04C-56) from the front of the muffler and remove the muffler.
2. Remove the four socket head cap screws (F-CS-04C-40-SS) from the valve block.
3. Unscrew the poly fitting nut from the male elbow (MPH-2539) located on the side of the valve block. Remove the two end caps (MPH-2521) from the valve block.
4. Remove the pipe plug (PF-AP-04-SS) from the lower valve block (MPH-5001). Use a 7/16" socket on either of the two valve pistons (MPH-2517) and rotate until the hole in the valve poppet (MPH-5005) aligns with the pipe plug port in the lower valve block.
5. Insert a 7/32" hex wrench through the pipe plug port and into the hole in the valve poppet (VPH-5005). (See Figure 1) Using a 7/16" socket or wrench unscrew either of the two valve pistons (MPH-2517) and remove. Repeat removal of the second valve piston.



Figure 1: Use a 7/16 socket or wrench on the top of the valve piston and rotate to align the round hole in the poppet with the tapped hole in the block. Insert hex wrench into the poppet and unscrew the valve piston from the valve rod. Repeat process for second valve piston.

NOTE: The hole diameter in the valve poppet is .2685 (6.81mm) if a 7/32" hex wrench is not available.



6. Remove the button head cap screw (F-BHCS-04C-16-SS) from the front of the lower valve block (MPH-5001). Twist and pull the upper valve block (VPH-5001 or MPH-5002) from the lower valve block (MPH-5001). Remove the valve rod assembly from the valve block.
7. Remove the two cap screws (F-CS-04C-08-SS) from each of the two valve exhausts (MPH-5009). Pull both of the valve exhausts from the valve blocks. Remove the diaphragm (MPH-5010) from the lower valve block (MPH-5001). (See Figure 2)



Figure 2: Lift the inner edge of the diaphragm up and remove from block. Coat the diaphragm bore with lithium grease (08465).

NOTE: Avoid putting any scratches in the valve blocks. To remove the diaphragm use a small screwdriver and push the center riser on the diaphragm to one side and slide out.

Repeat the removal of the diaphragm from the upper valve block (VPH-5001 or MPH-5001).

8. Remove each O-ring and replace with new. Coat every new O-ring with lithium grease (8465). Coat the diaphragm bore and both valve piston bores with lithium grease (8465) before assembling. Use a wire brush to clean the valve rod threads of any dry thread lock compound.



Valve Block Reassembly:

NOTE: Removable thread lock compound will be required for reassembly. If either one of the two valve rods unscrewed from the valve poppet (MPH-5005) during disassembly, put one to two drops of removable thread lock compound on threads and assemble.

1. Set the valve rod assembly into the lower valve block (MPH-5001).

NOTE: Rotate the valve rod assembly so the hole in the valve poppet aligns with the pipe plug (PF-AP-04-SS) bore. Insert 7/32" hex wrench through the pipe plug bore and into the hole in the valve poppet to hold valve rod assembly in place.

2. Slide the upper valve block (MPH-5002 or VPH-5001) into the lower valve block (MPH-5001) and align properly. Screw the button head cap screw (F-BHCS-04C-16 SS) into the lower valve block.
3. Use one to two drops of removable thread lock compound in the female threads of the valve pistons (MPH-2517). (See Figure 3) Shake off any excess thread lock compound and screw onto either valve rod end. Repeat for process for the second valve piston and remove hex wrench from valve block. Push in on the valve piston from either end to position the valve assembly.



Figure 3:

Use only one or two drops of thread lock compound in valve piston threads.

4. Use either Teflon tape or pipe compound on the pipe plug (PF-AP-04-SS) threads and screw into the lower valve block.



5. Insert the diaphragms (MPH-5010) into the upper and lower valve blocks with the outside leading edge of the diaphragms facing out. Push the diaphragms all the way down into the valve block bore. Install the valve exhausts (MPH-5009) onto the upper and lower valve blocks. One side of the valve exhausts has three holes, one of the holes must line up with the machined holes in the upper and lower valve block. (See *Figure 4*)
6. Install the two socket head cap screws (FCS- 04C-08-SS) into each of the two valve exhausts and snug tight.



Figure 4
*Do not block the hole in the valve
block when installing the valve exhaust.*

7. Install valve end caps (MPH-2521) into the upper and lower valve blocks and lightly snug tight.



Air Cylinder Disassembly:

1. Remove the Shoulder Bolt (F-SB-12-32) from the Clevis (UPPH-10039) and Ball Joint (B-BJRE-.750-1-HS). For easy repair the Power Head can be removed from the unit and mounted in a vise by the Clevis on the Upper End Plate (UPPH-10012).
2. Remove the Ball Joint (B-BJRE-.750-1-HS) from the end of the Piston rod (UPPH-10009)
3. Remove the five (5) Hex nuts (F-HN-06F) from the Tie rods (VPH-5003). Pull the Lower End Cap (UPPH-10004) off the Cylinder (VPH-10003) and Piston Rod.
4. Slide the Piston rod (UPPH-10009) and Piston (VPH-10006) out of the Cylinder (VPH-10003).
5. Use a pair of Snap Ring pliers to remove the Snap Ring (7205-2-26) from the Piston Rod Bushing (VPH-10011)
6. Remove the Piston Rod Bushing (VPH-10011) from the Lower End Cap.
7. Replace all O-rings and coat with lithium grease (8465). Coat the inside of the Cylinder, Piston rod and Piston rod bushing with lithium grease (8465).





Pilot Valve Rebuild:

NOTE: The two pilot valves in the upper and lower end caps are the same. Start with the pilot valve in the Upper end cap.

1. Remove the Spring housing (MPH-2541) from the Upper end cap (UPPH-10012). Remove Spring (MPH-2533) with Inlet rod (MPH-2540). Turn the End cap over and a small Spring (MPH-2526) will fall out. (See Figure 5)
2. Replace O-ring (O-B-012) on the Spring housing (MPH-2541) and the O-ring (O-U-006) on the Inlet rod (MPH-2540). Coat O-rings and springs with SUPERLUBE grease (SUPERLUBE). Set spring (MPH-2533) into the Spring housing (MPH-2541) with Inlet rod (MPH-2540) facing up.

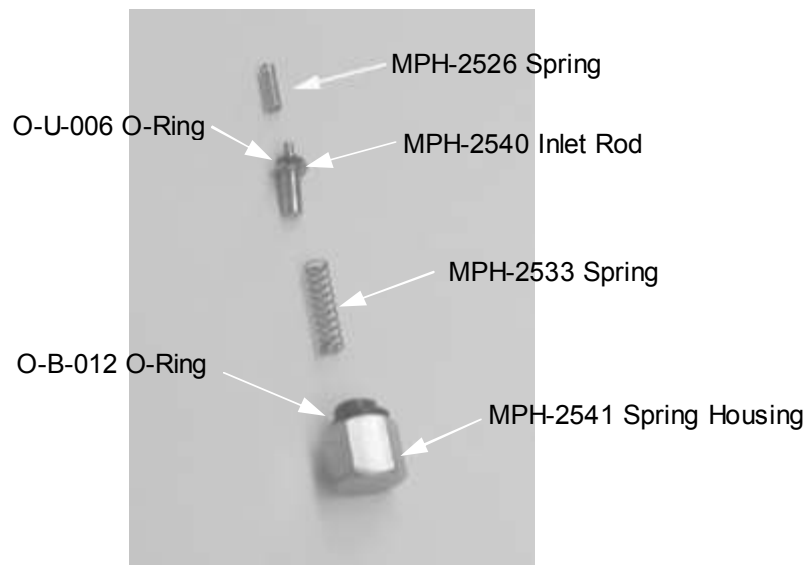


Figure 5

The MPH-2526 spring will be installed from the bottom of the end cap.

NOTE: Do not install the small Spring (MPH-2526) at this time.

3. Screw the inlet spring housing (MPH-2509) into the upper end cap.



4. Remove the Stem seal (MPH-2511-01) from the bottom of the Upper end cap (UPPH-10012). Remove the Seal guide (MPH-2512) with the Spring (MPH-2528). Replace O-ring (O-B-012) and coat O-ring and stem with SUPERLUBE grease (SUPERLUBE). Drop the small Spring (MPH-2526) into the stem seal bore, the spring should center itself onto the end of the Inlet rod (MPH-2540). (See Figure 6)



Figure 6

Install the MPH-2526 after the spring housing (MPH-2509), Spring (MPH-2533) and inlet rod (MPH-2514) has been installed in the top of the end cap.

5. Insert the Spring (MPH-2528) with the Seal guide (MPH-2512) into the end cap. Set the small end of the Seal guide (MPH-2512) onto the Spring (MPH-2528). Set a new O-ring (O-B-008) on top of the Seal guide. Screw the Stem seal (MPH-2511-01) with Valve stem (MPH-2513) into the Upper end cap. (See Figure 7)

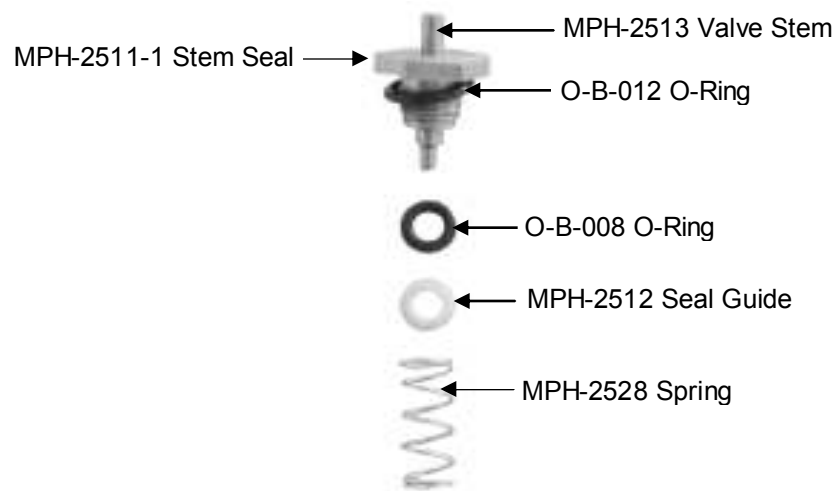


Figure 7

6. Repeat the Pilot valve rebuild on the Lower end cap.



Air Cylinder Reassembly:

1. Install the Piston Rod Bushing (VPH-10011) into the Lower End Cap and secure with the Snap Ring.
2. Place the Cylinder Piston (VPH-10003) onto the Lower End Cap o-ring (O-B-178).
3. Slide the Piston rod (UPPH-10009) and the Piston (VPH-10006) down into the Cylinder (VPH-10003).

CAUTION: Use care not to scratch the inside of the Cylinder during installation.


4. Install the Lower End Cap (UPPH-10004) onto the Piston Rod (UPPH-10009) and down onto the Cylinder (VPH-10003) with the valve block flats facing the same direction.
5. Screw the hex nuts (F-HN-06F) onto the tie rods and snug the hex nuts.
6. Position the O-rings on the back of the Pilot Valve assembly
7. Mount the Pilot Valve assembly onto the side of the Powerhead using the four Cap Screws (F-CS-04C-40). Be sure the Pilot Valve is positioned correctly.
8. Install the Muffler onto the Pilot Valve using the two Hex Bolts (F-HB-04C-56).
9. Using a drop of removable thread lock compound and Install the Ball Joint (B-BJRE-.750-1-HS) on the end of the Piston rod (UPPH-10009).
10. Mount the Power Head back onto the unit using the Shoulder Bolts (F-SB-12-32).
11. Connect the pilot air hose, regulated air hose and any Valves to Power Head.



Parts Drawings:

UPPH-10000	10" POWER HEAD ASSEMBLY – 4" STROKE
VPH-10000-SK	10" AIR MOTOR - SEAL KIT
VPH-SB-XL	SHIFT BLOCK FOR VPH-5000, 70000 & 10000
MPH-SB-XL-SK	SEAL KIT – SHIFT BLOCK



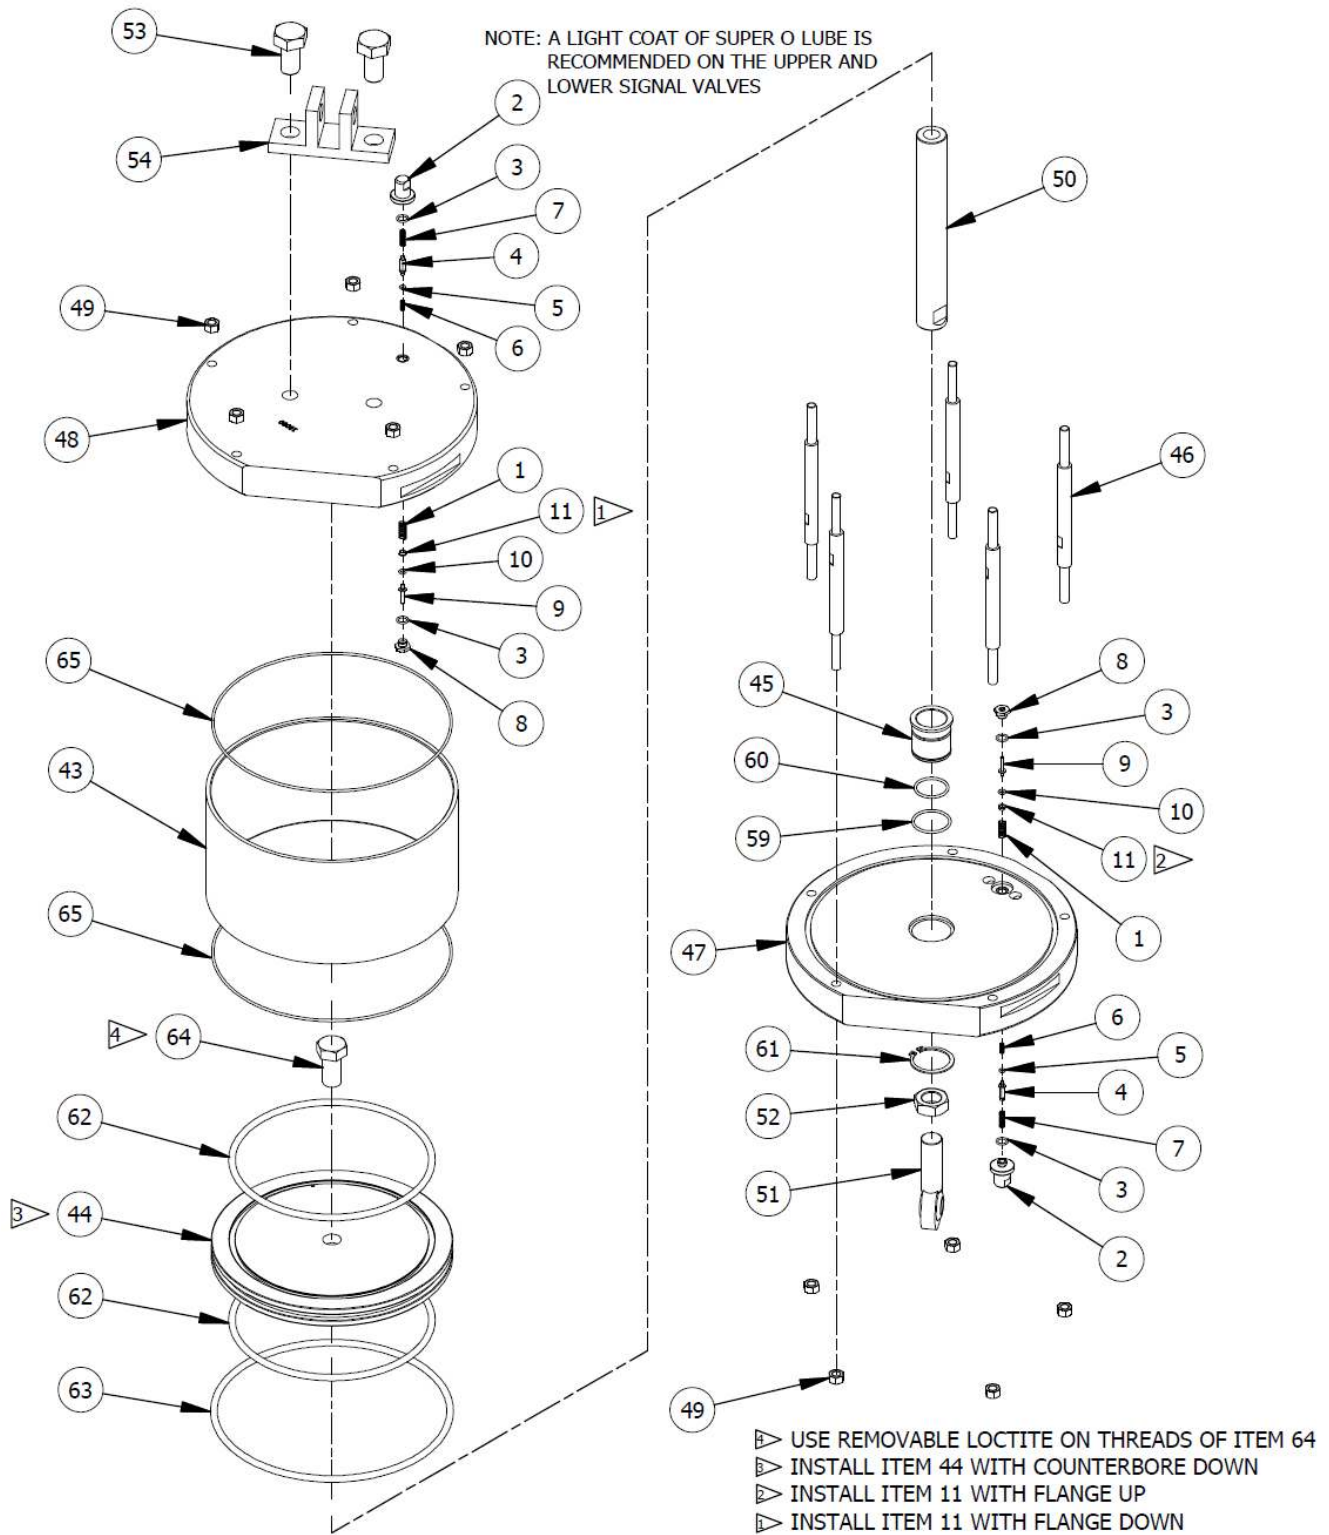

MAGNUM VENUS PLASTECH


10" POWER HEAD

UPPH-10000

REV:D 06/03/11

SHEET 1 / 3

3/3/2010

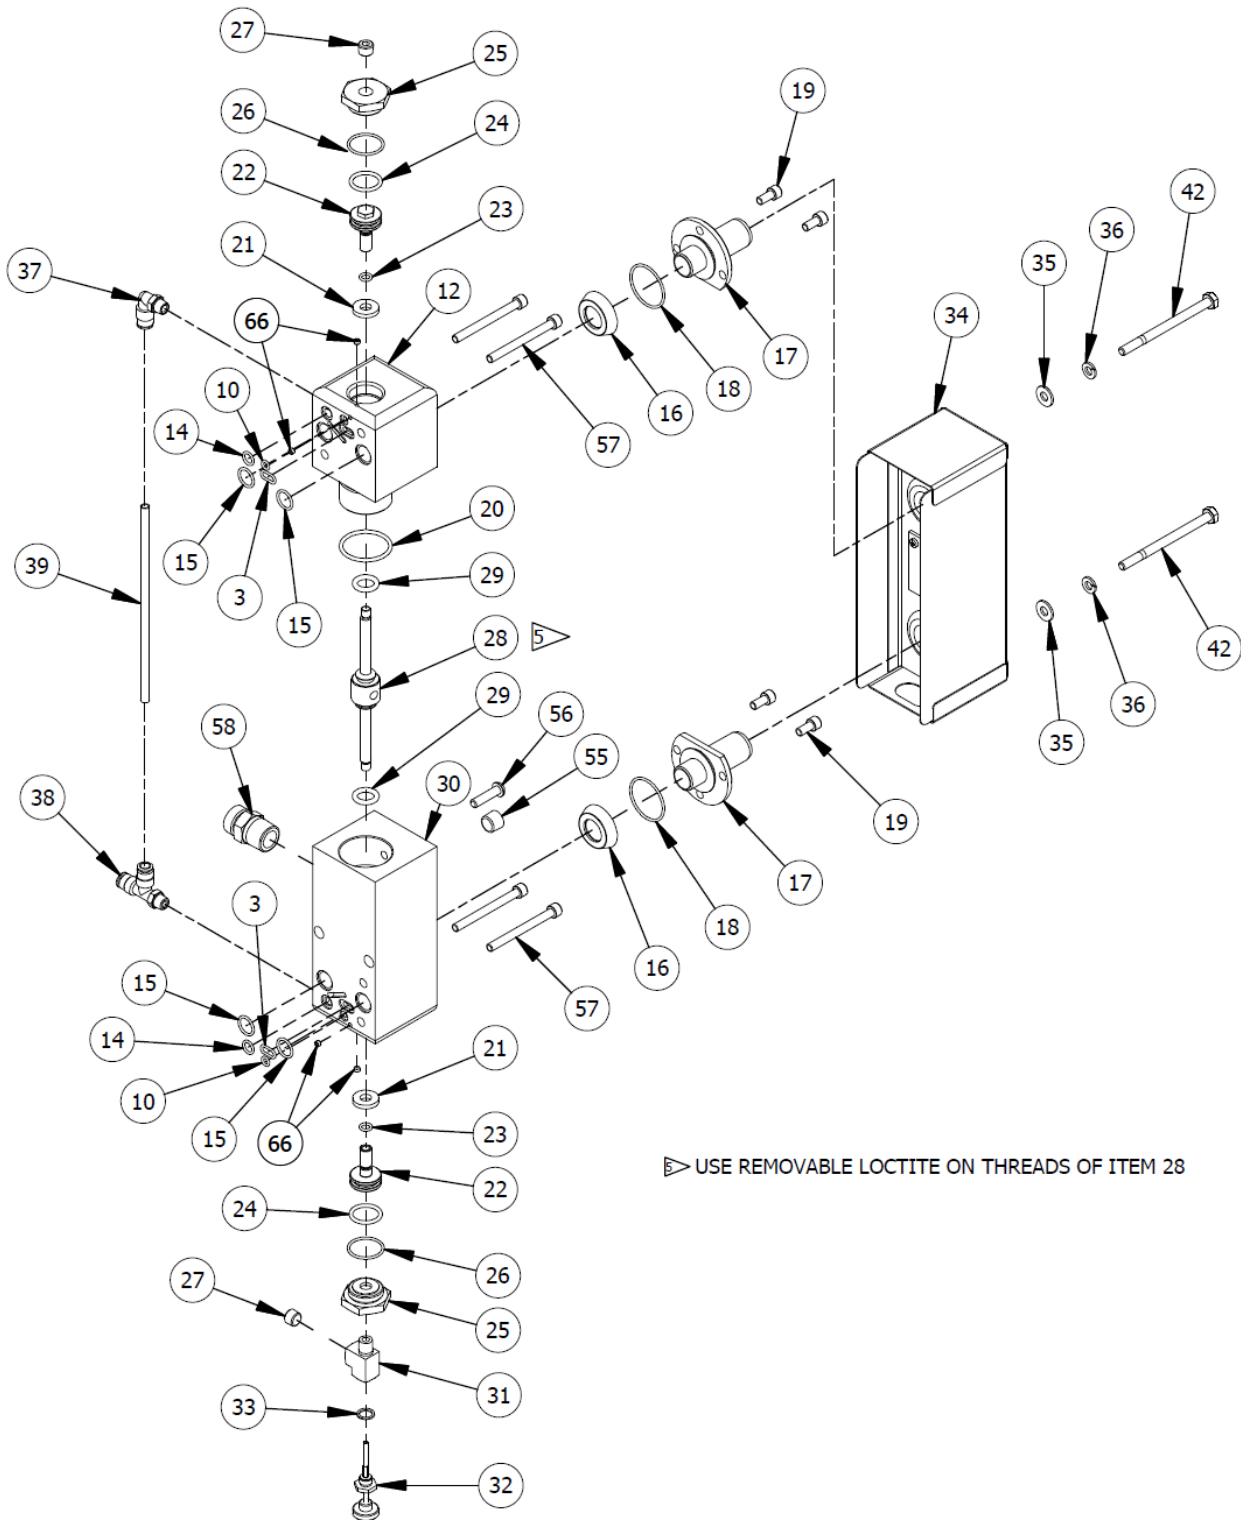

MAGNUM VENUS PLASTECH

10" POWER HEAD

UPPH-10000

REV:D 06/03/11

SHEET 2 / 3

3/3/2010

Parts List			
ITEM	PART NUMBER	QTY	DESCRIPTION
	1 MPH-2528	2	SPRING
	2 UPPH-10013	2	SPRING HOUSING-PILOT VALVE
*	3 O-B-012	6	O-RING
	4 MPH-2540	2	INLET ROD- PILOT VALVE
*	5 O-U-006	2	O-RING
	6 MPH-2526	2	SPRING
	7 MPH-2533	2	COMPRESSION SPRING
	8 MPH-2511-01	2	STEM SEAL ASSY- PILOT VALVE
	9 MPH-2513	2	VALVE STEM- PILOT VALVE
*	10 O-B-008	4	O-RING
	11 MPH-2512	2	SEAL GUIDE- PILOT VALVE
	12 VPH-5001	1	UPPER VALVE BLOCK
*	14 O-B-011	2	O-RING
*	15 O-B-014	4	O-RING
*	16 MPH-5010	2	DIAPHRAGM
	17 MPH-5009	2	EXHAUST PORT
*	18 O-B-026	2	O-RING
	19 F-CS-04C-08-SS	4	SOCKET HEAD CAP SCREW
*	20 O-B-125	1	O-RING
	21 MPH-3262	2	PISTON STOP
	22 MPH-2517	2	VALVE PISTON
*	23 O-D-010-90	2	O-RING
*	24 O-B-116	2	O-RING
	25 MPH-2521	2	VALVE END CAP
*	26 O-B-019	2	O-RING
	27 PF-AP-02-SS	2	PIPE PLUG
	28 VPH-5005	1	VALVE ROD POPPET
*	29 O-U-206-90	2	O-RING
	30 MPH-5001	1	LOWER VALVE BLOCK
	31 PF-ST-02-BR	1	TEE FITTING
	32 MPH-2546-01	1	RESET STEM ASSEMBLY
	33 MPH-2545	1	SEAL
	34 VPH-5004-01	1	MUFFLER ASSEMBLY
	35 F-FW-04	2	FLAT WASHER
	36 F-SW-04-SS	2	LOCK WASHER
	37 MPH-2539	1	MALE ELBOW
	38 MPH-2538	1	MALE POLY TEE FITTING
	39 MS-2052-1	.56 FT	POLY TUBE
	42 F-HB-04C-56-SS	2	HEX BOLT
	43 VPH-10003	1	10 INCH DIA CYL. 4 INCH STROKE
	44 VPH-10006	1	PISTON - 10" POWER HEAD
	45 VPH-10011	1	BUSHING - 1.25 dia. PISTON ROD
	46 VPH-5003	5	TIE ROD
	47 UPPH-10004	1	LOWER END CAP-10"
	48 UPPH-10012	1	UPPER END CAP - 10"
	49 F-HN-06F	10	HEX NUT
	50 UPPH-10009-EXP	1	PISTON ROD
	51 B-BJRE-.750-3	1	BALL JOINT ROD END
	52 F-JN-14F	1	JAM NUT
	53 F-HB-12C-24-GR5	2	HEX BOLT
	54 UPPH-10039	1	POWERHEAD CLEVIS - 10"
	55 PF-AP-04-SS	1	ALLEN PLUG
	56 F-BHCS-04C-16-SS	1	BUTTON HEAD CAP SCREW
	57 F-CS-04C-40-SS	4	SOCKET HEAD CAP SCREW
	58 PF-HN-08-08S	1	HOSE ADAPTER
*	59 O-B-127	1	O-RING
*	60 O-B-124	1	O-RING
	61 7205-2-26	1	EXTERNAL SNAP RING
*	62 O-B-445	2	O-RING
*	63 O-B-448	1	O-RING
	64 F-HB-12F-24-GR5	1	HEX BOLT
*	65 O-B-178	2	O-RING
	66 F-SS-832-02-SS	4	SS SET SCREW

OPTIONAL PARTS AND ASSEMBLIES PARTS LIST

PART No.	QTY	DESCRIPTION
MPH-2542	1	RESET BUTTON ASSY
VPH-SB-XL	1	SHIFT BLOCK ASSY

REPAIR KITS

PART No.	DESCRIPTION
* VPH-10000-SK	SEAL KIT

* ASTERISKS DENOTE PARTS IN SEAL KIT

MAGNUM VENUS PLASTECH

10" POWER HEAD


UPPH-10000


REV:D 06/03/11

SHEET 3 / 3

3/3/2010

VPH-10000-SK SEAL KIT -
10" AIR MOTOR

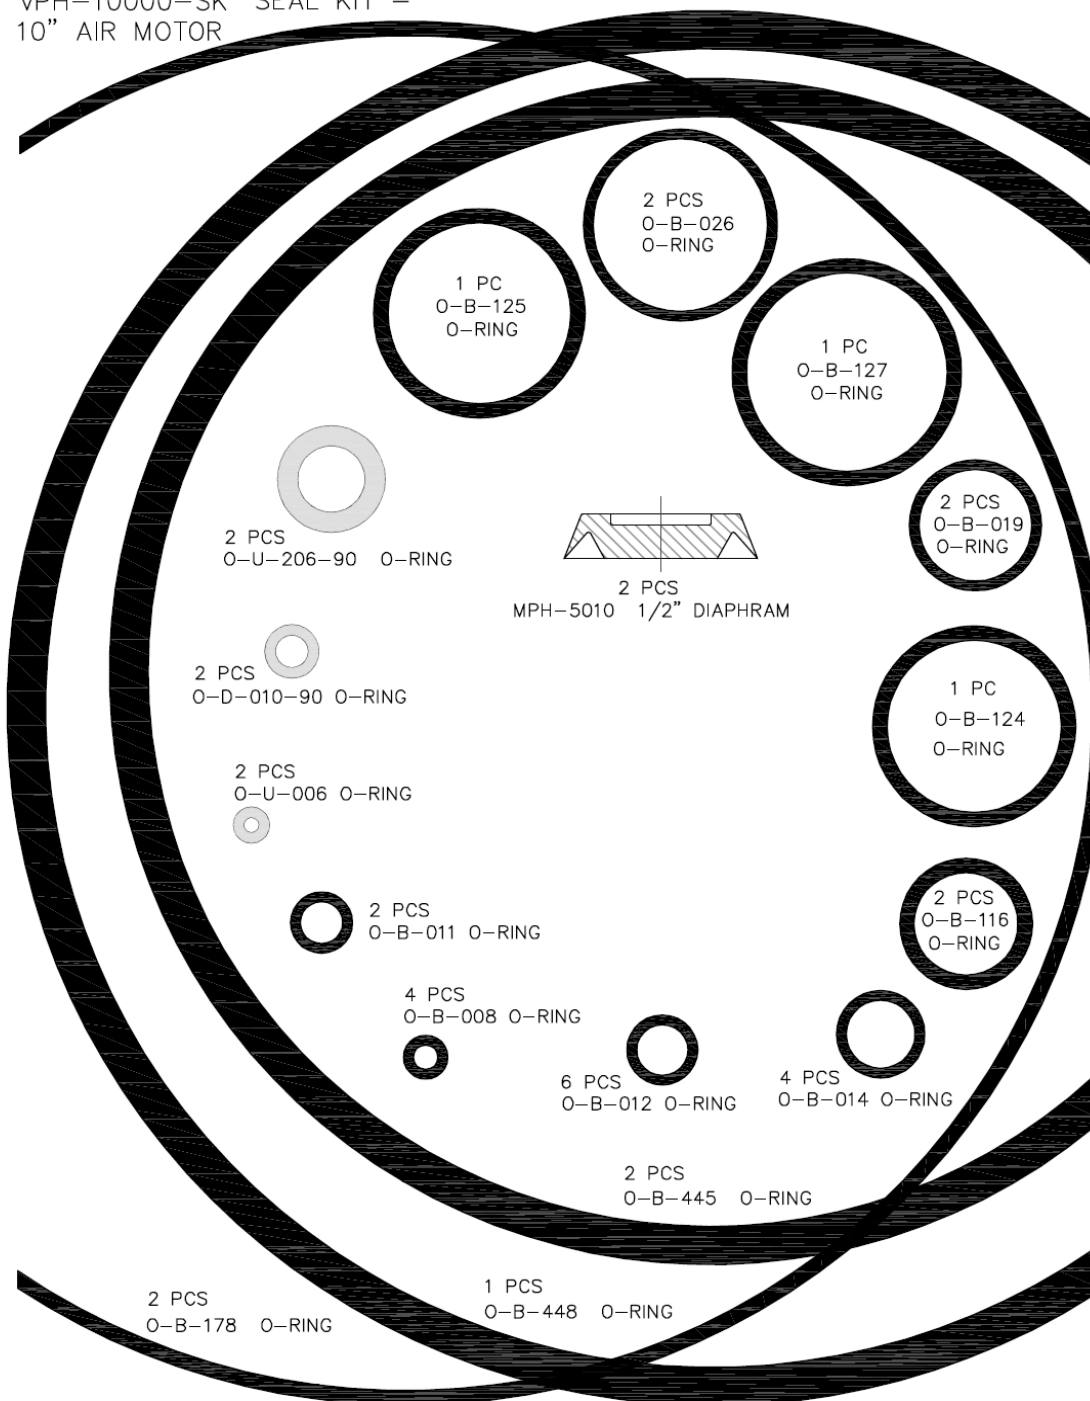

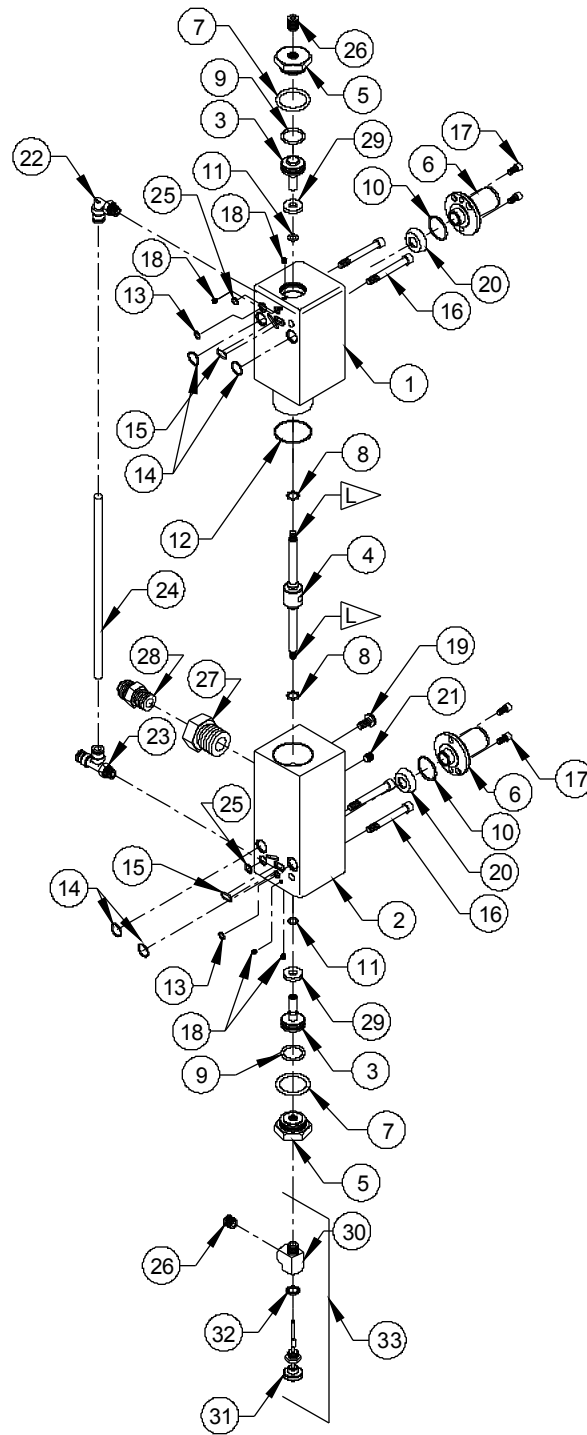

L USE REMOVABLE LOCTITE™ ON THESE THREADS AT ASSEMBLY

MAGNUM VENUS PRODUCTS

Shift Block for VPH-5000, 7000, 10000

VPH-SB-XL

REV. - 10/14/05 BT2
REV. A - ADDED REPAIR KIT 06-04-07 BT2

Shift Block for VPH-5000,7000,10000

PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	VPH-5001	1	UPPER VALVE BLOCK
2	MPH-5001	1	LOWER VALVE BLOCK
3	MPH-2517	2	VALVE PISTON
4	VPH-5005	1	VALVE POPPET
5	MPH-2521	2	VALVE END CAP
6	MPH-5009	2	VALVE EXHAUST
* 7	O-B-019	2	O-RING
* 8	O-U-206-90	2	O-RING
* 9	O-B-116	2	O-RING
* 10	O-B-026	2	O-RING
* 11	O-D-010-90	2	O-RING
* 12	O-B-125	1	O-RING
* 13	O-B-008	2	O-RING
* 14	O-B-014	4	O-RING
* 15	O-B-012	2	O-RING
16	F-CS-04C-40-SS	4	SOCKET HEAD CAP SCREW
17	F-CS-04C-08-SS	4	SOCKET HEAD CAP SCREW
18	F-SS-832-02-SS	4	SET SCREW
19	F-BHCS-04C-16-SS	1	BUTTON HEAD CAP SCREW
* 20	MPH-5010	2	DIAPHRAGM
21	PF-AP-04-SS	1	PIPE PLUG
22	MPH-2539	1	PUSH POLY FITTING - MALE ELBOW
23	MPH-2538	1	PUSH POLY FITTING - MALE TEE
24	MS-2052-1	.56ft	Ø1/4 x 6-3/4 TUBING
* 25	O-B-011	2	O-RING
26	PF-AP-02-SS	2	PIPE PLUG
27	PF-RB-08-06	1	PIPE BUSHING
28	PF-HN-06-06S	1	HEX NUT
29	MPH-3262	2	PISTON STOP
30	PF-ST-02-BR	1	TEE FITTING
31	MPH-2546-01	1	VALVE STEM ASSY
32	MPH-2545	1	SEAL

REPAIR KITS


PART NO.	DESCRIPTION
* MPH-SB-XL-SK	SEAL KIT


OPTIONAL PARTS AND ASSEMBLIES


PARTS LIST


ITEM	PART NO.	QTY	DESCRIPTION
33	MPH-2542	1	RESET BUTTON ASSY


MPH-SB-XL-SK
SEAL KIT 5" AIR MOTOR

 2 PCS
O-B-008 O-RING


 2 PCS
O-B-011 O-RING


 2 PCS
O-B-012 O-RING


 4 PCS
O-B-014 O-RING


 2 PCS
O-B-116 O-RING


 2 PCS
O-B-019 O-RING

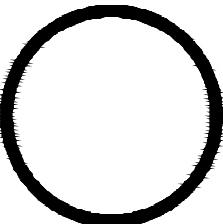 2 PCS
O-B-026 O-RING

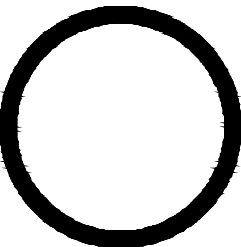 1 PCS
O-B-125 O-RING

 2 PCS
O-U-206-90 O-RING

 2 PCS
O-D-010-90 O-RING

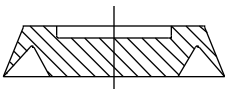 2 PCS
MPH-5010 1/2" DIAPHRAM



Revision Information:

Rev. 03/2010	Created the Manual
Rev. 03/2010-A	Updated from HVM to UPPH part numbers
Rev. 06/2011	Included the note for the SUPERLUBE grease on the Upper and Lower Pilot Valves. Updated the drawings in the manual.
Rev. 05/2012	Updated the Logo, MVP Address and the manual format, added the Terms and Conditions section.





MAGNUM VENUS PLASTECH

CORPORATE HEADQUARTERS and MANUFACTURING
11692 56th Court * Clearwater, FL 33760 * Tel 727-573-2955 * Fax 727-571-3636

TECHNOLOGY CENTER and MANUFACTURING
1862 Ives Ave. * Kent, WA 98032 * Tel 253-854-2660 * Fax 253-854-1666

MVP Plastech UK
Chilsworthy Beam, Gunnislake, Cornwall, PL18 9AT UK, * Tel: +44 (0) 1822 832621
Fax: +44 (0) 1822 833999

www.mvpind.com

Assemblies Covered in this Manual:

UPPH-10000 10" PowerSlide Powerhead – 4" Stroke – Ultra Proportioner (UP)

Rev. 05/2012